

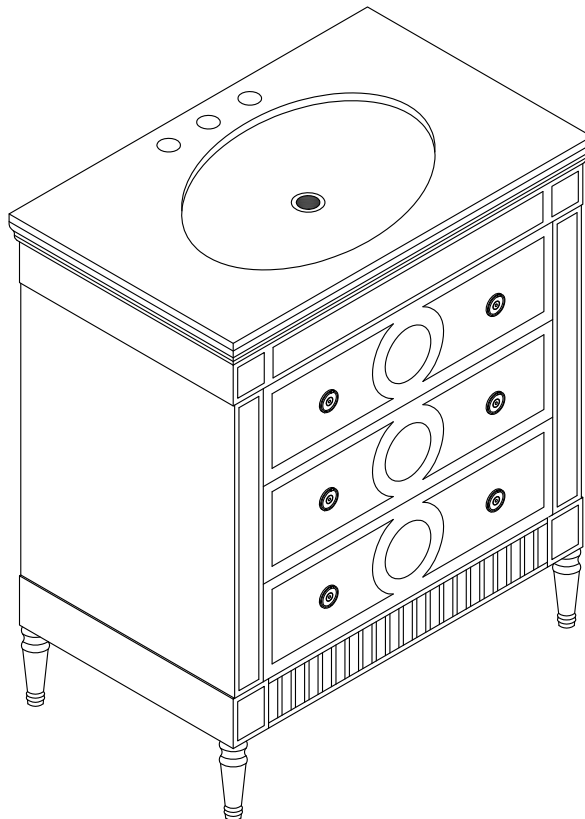
HOME DECORATORS COLLECTION

HDC# 18044 MFG# TW-19426BK / TW-19426WE
REFLECTIONS EMPIRE VANITY 36"Hx32"Wx21"D

ASSEMBLY INSTRUCTIONS

- Note: 1. Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.
2. You need at least 2 people to finish the assembly of this product.


Made In China




BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. FOLLOWING INSTRUCTIONS LISTED BELOW IN THE PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.

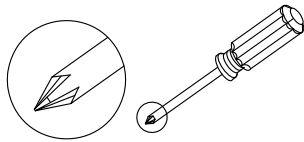ASSEMBLY TOOLS REQUIRED




"+"Screw driver

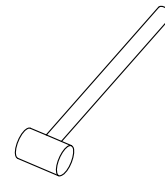

Rubber Mallet

WOODEN DOWEL INSTALLATION PROCEDURE

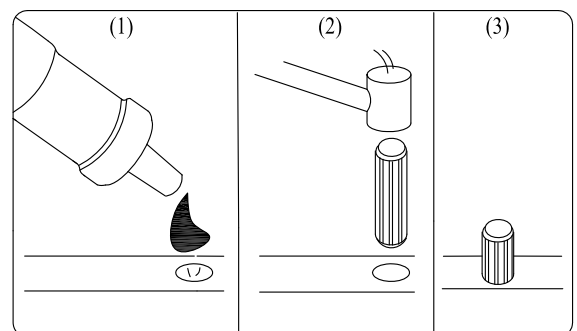- (1) FILL HOLE 1/4 FULL OF GLUE.
- (2) GENTLY TAP DOWEL INTO HOLE WITH RUBBER Mallet OR USE HAND PRESS IN.
DO NOT USE HAMMER
- (3) WIPE AWAY EXCESS GLUE.



HIDDEN CONNECTOR ASSEMBLY TECHNIQUES FOR LOCK NUT & LOCK PIN

1 SET INCLUDES: (C) CAM-LOCK 1PC. (A) CAM BOLT 1PC.

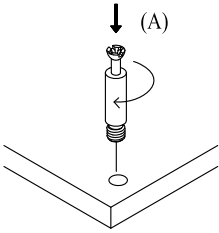
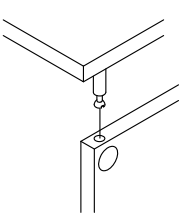
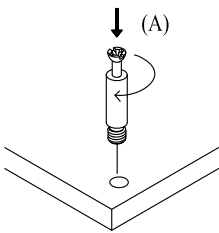
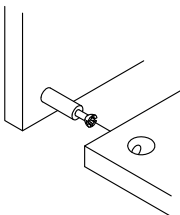
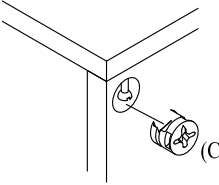
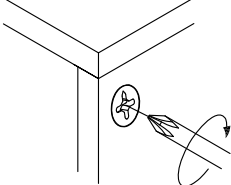
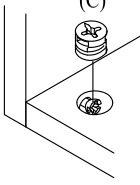
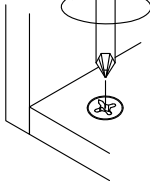
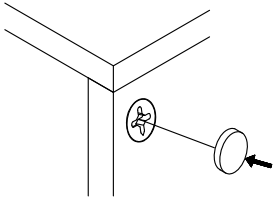
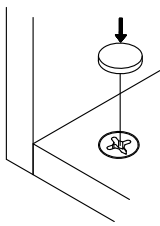
TOOL NEEDED: "+" SCREW DRIVER

STEP 1: SCREW CAM BOLT (A) ONTO PRE-SET PLASTIC NUT ON PANEL. USE A "+" SCREW-DRIVER FOR TIGHTENING. ATTENTION: DO NOT OVER TIGHTEN THE CAM BOLT (A).

STEP 2: ATTACH BOTH PANELS, MAKE SURE YOU HAVE INSERTED THE CAM BOLT TO THE VERY DEPTH OF THE HOLE WITH RUBBER Mallet GENTLY, CAUTION: DO NOT USE HAMMER. THEN INSERT CAM-LOCK (C) INTO PRE-DRILLED HOLE ON PANEL, MAKE SURE THE ARROW ON CAM-LOCK (C) SET IN PANEL POINT TOWARD THE HOLE INTO WHICH THE CAM BOLT (A) HAS BEEN INSERTED AND INSERTED THE CAM-LOCK (C) TO THE VERY DEPTH OF THE HOLE.






STEP 3: ROTATE THE CAM-LOCK (C) CLOCKWISE TO SECURE CAM BOLT (A) BY TIGHTENING WITH A "+" SCREWDRIVER.

DETAIL STEP PLEASE SEE THE BELOW PICTURE.











VERTICAL CONNECTION		HORIZONTAL CONNECTION	
(1) 	(2) 	(1) 	(2) 
(3) 	(4) 	(3) 	(4) 
(5) 		(5) 	

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS, WHICH MAY HAVE CAME LOOSE INSIDE THE CARTON DURING SHIPMENT. COUNT ALL PARTS AND MATERIAL HARDWARE, COMPARE WITH PARTS LIST TO BE SURE ALL PARTS ARE PRESENT. IF ANY PARTS ARE MISSING OR DAMAGED, PHONE, FAX OR MAIL TO OUR CUSTOMER SERVICE DEPARTMENT. FOR EFFICIENT AND SPEEDY SERVICE, PLEASE INDICATE THE MODEL NUMBER AND CODE LETTER OF THE PART NEEDED.

HARDWARE LIST

WOOD DOWEL 12 PCS  ø8X30mm (1)	ROUND HEAD BOLT FLAT WASHER SPRING WASHER 12 SETS  ø6X32mm (2)	FLAT HEAD SCREW 4 PCS  ø4x25mm (3)	KNOB BOLT 6 SETS  (4)	ROUND HEAD SCREW 14 PCS  ø3X12mm (5)
CAM-BOLT CAM-LOCK 4 SETS  (6)	ALLEN KEY 1 PC  (7)	GLUE 1 PC  (8)	FLAT HEAD SCREW DRAWER LIMIT STOPPER 1 SET  ø3X12mm (9)	

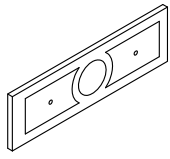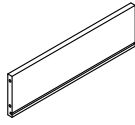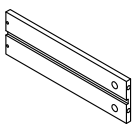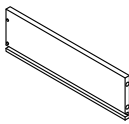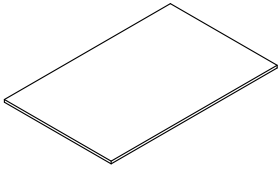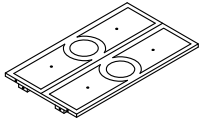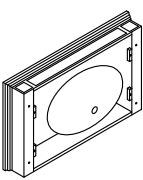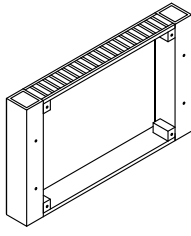
PARTS LIST

DRAWER FRONT PANEL 1 PC  A	DRAWER BACK PANEL 1 PC  B	DRAWER LEFT SIDE PANEL 1 PC  C
DRAWER RIGHT SIDE PANEL 1 PC  D	DRAWER BOTTOM PANEL 1 PC  E	LEFT SIDE PANEL 1 PC  F
RIGHT SIDE PANEL 1 PC  G	FRONT FRAME 1 PC  H	LEG 4 PCS  I
TOP FRAME 1 PC  J	BLACK PANEL 2 PCS  K	BOTTOM FRAME 1 PC  L

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.


STEP 1: ASSEMBLE DRAWER

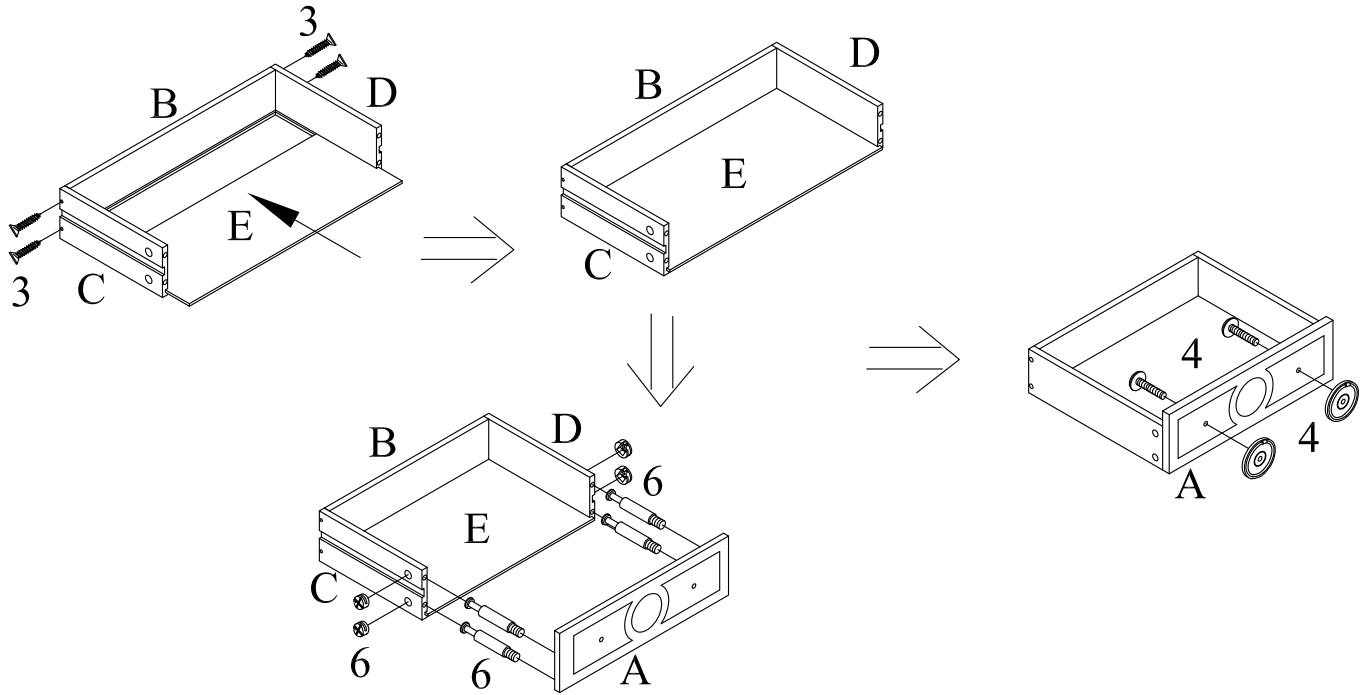- USE SCREW (3) TO ATTACH DRAWER SIDE PANEL (C & D) AND BACK PANEL (B) TOGETHER.
- INSERT DRAWER BOTTOM PANEL (E) INTO THE SLOTS OF SIDE PANEL (C & D).
- USE CAM-BOLT & CAM-LOCK (6) TO ASSEMBLE DRAWER FRONT PANEL (A) AND DRAWER SIDE PANEL (C & D) TOGETHER.
- USE ROUND BOLT (4) TO ATTACH KNOB (4) ONTO DRAWER FRONT PANEL (A).




STEP 2: ASSEMBLE SIDE PANEL (F & G) AND FRONT FRAME (H)

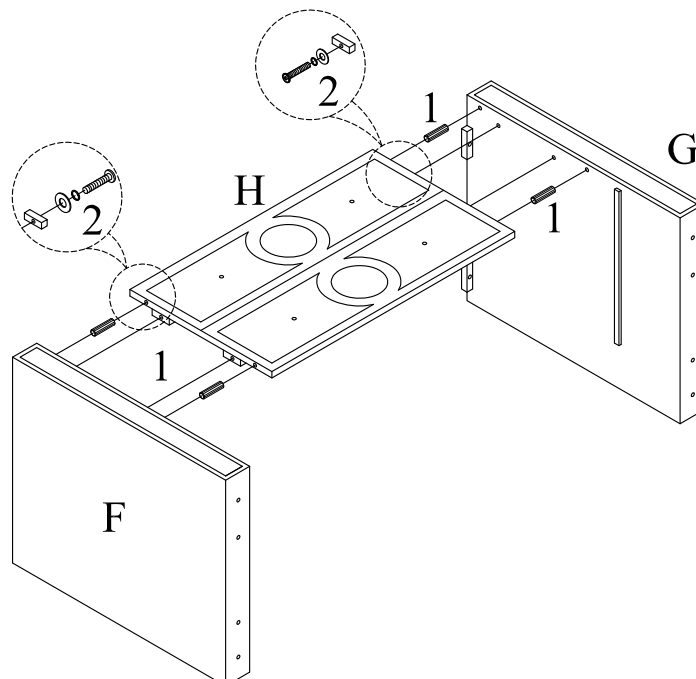- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT, FLAT WASHER, SPRING WASHER (2) AND WOOD DOWEL (1) TO ASSEMBLE SIDE PANEL (F & G) AND FRONT FRAME (H) TOGETHER BY ALLEN KEY (7) AS SHOWN.




STEP 3: ASSEMBLE BOTTOM FRAME (L)

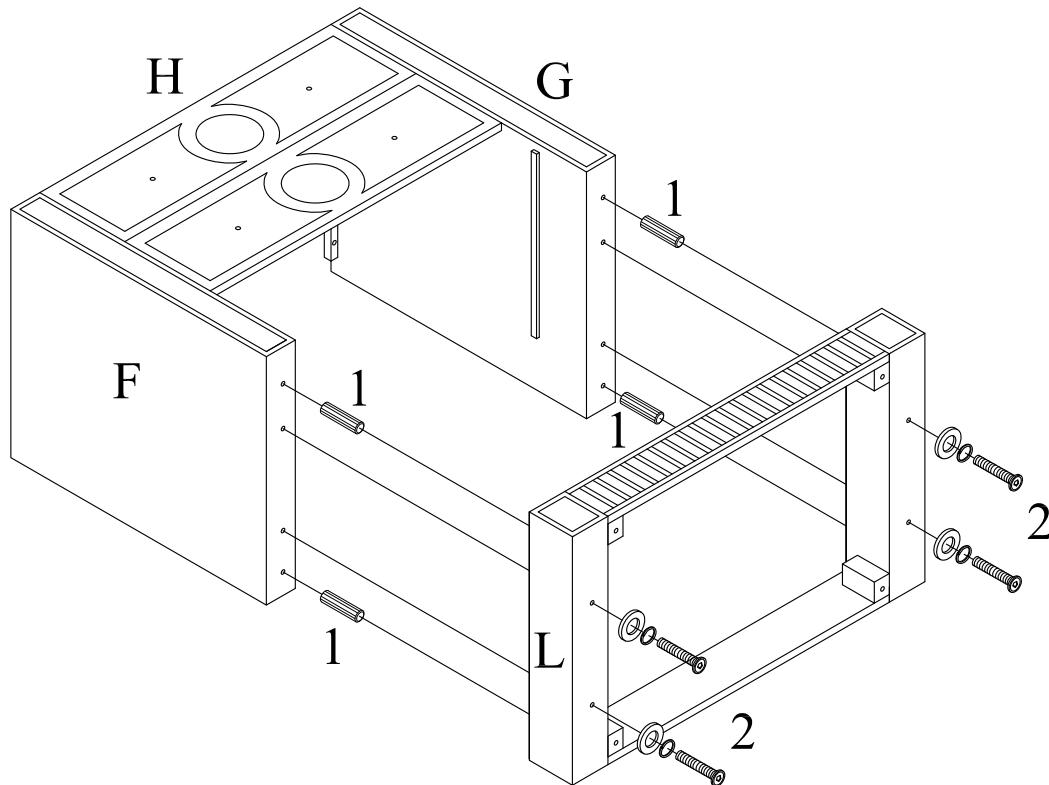- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES.
(DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT, FLAT WASHER, SPRING WASHER (2) AND WOOD DOWEL (1) TO ASSEMBLE BOTTOM FRAME (L) AND SIDE PANEL (F & G) TOGETHER AS SHOWN.




STEP 4: ASSEMBLE LEG (I)

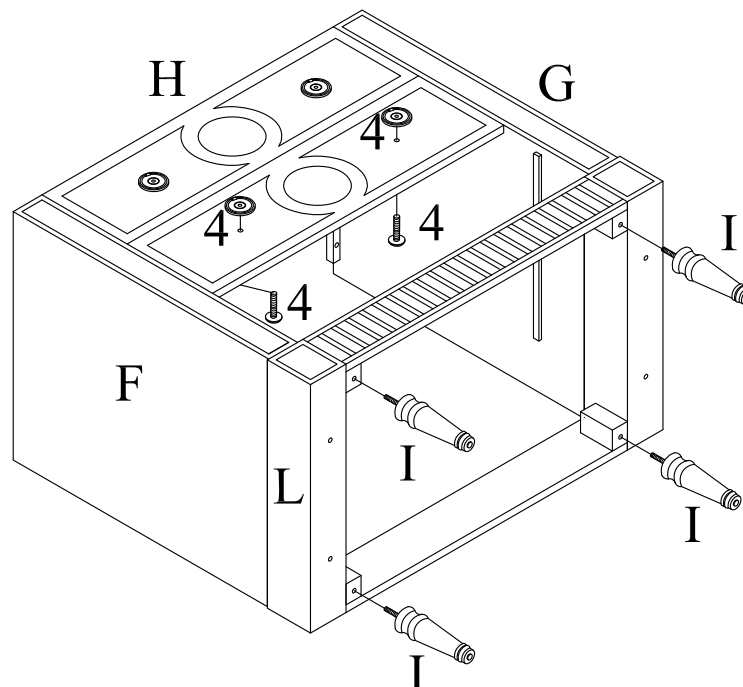- ROTATE LEG (I) ONTO BOTTOM FRAME (L) TIGHTLY.
- USE ROUND BOLT (4) TO ATTACH KNOB (4) ONTO FRONT FRAME (H).




STEP 5: ASSEMBLE TOP FRAME (J)

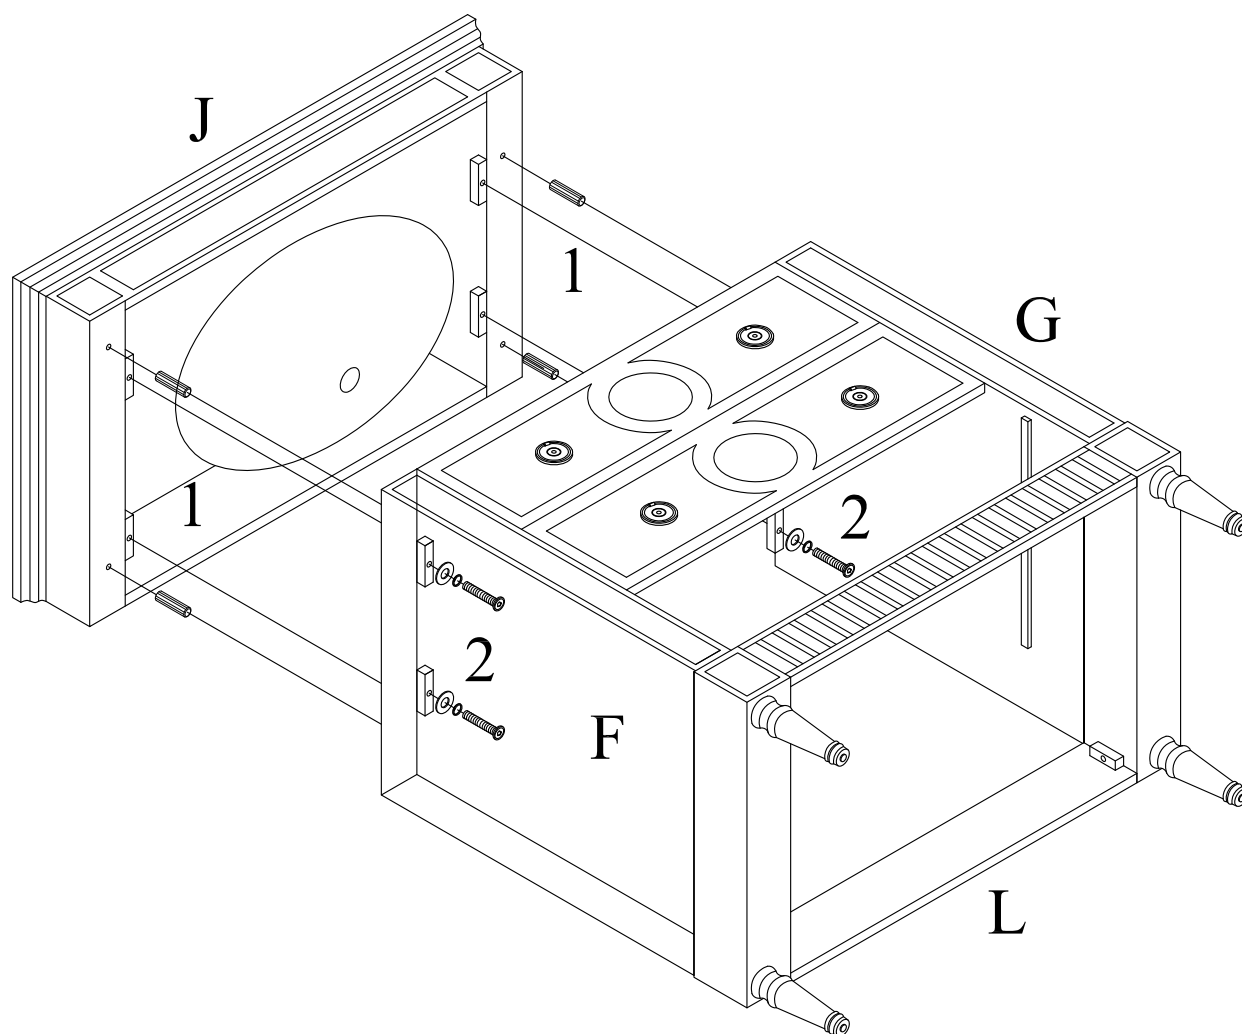- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES.
(DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT, FLAT WASHER, SPRING WASHER (2) AND WOOD DOWEL (1) TO ASSEMBLE SIDE PANEL (F & G) AND TOP FRAME (J) TOGETHER AS SHOWN.



STEP 6: PLACE DRAWER

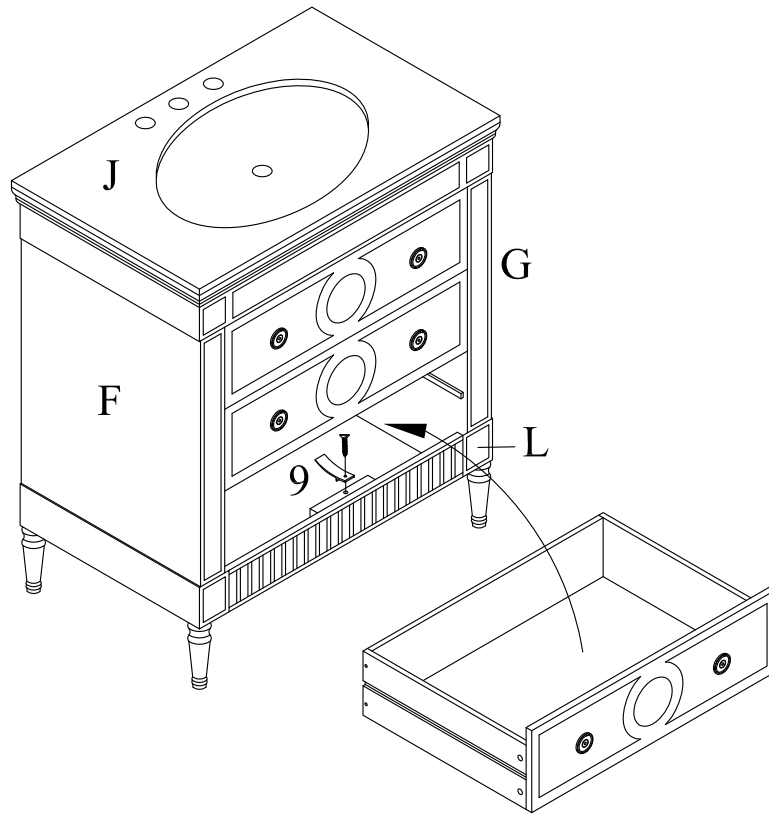- USE FLAT HEAD SCREW (9) TO ATTACH DRAWER LIMIT STOPPER (9) ONTO BOTTOM FRAME (L).
- INSERT THE PRE-ASSEMBLED DRAWER INTO THE PRODUCT BODY PROPERLY AS SHOWN.



STEP 7: ASSEMBLE BACK PANEL (K)

- USE ROUND HEAD SCREW (5) TO ATTACH BACK PANEL (K) ON THE BACK OF PRE-ASSEMBLED UNIT.

NOTE: BEFORE YOU ASSEMBLE THE BACK PANEL, PLEASE MAKE SURE THE 2 SIDE PANELS HAVE AN EVEN GAP BETWEEN THEM. IF UNEVEN, SHIFT THE SIDE PANELS UNTIL EVENLY SPACED, THEN FIX BACK PANEL.

